



# FLAIR

## Homeowner Guide

 
### Flair Puck and Smart Vent









## Welcome

Congratulations on your new Flair system! The Flair Puck brings advanced machine-learning automation to your home. With Flair, you now have access to scheduling, improved temperature regulation, and control over your Flair system from anywhere using the Flair App.

 
## Flair Control Bar



-  Manually toggle your home between Home and Away.
-  Displays weather for your zip code.
-  Define a set point for your home. If your smart thermostat is controlling Flair, your thermostat defines your set point.
-  Switch between heat, cool and auto heat/cool mode.
-  Create a schedule. Use scheduling to prioritize different areas of your home. For example, you can set bedrooms to inactive during the day, and living areas inactive at night.
-  Auto mode will automatically run the system using Flair's advanced machine-learning algorithms. Manual mode requires you to open and close Smart Vents using a widget in the Flair app. Most systems run in Auto mode.



### Flair Room Tiles

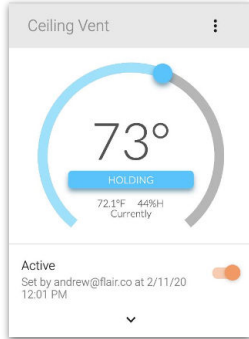

A room tile displays the set point and room temperature for a room. Drag the blue dot to adjust the room's set point. This creates a room "hold". Click the blue "Holding" button to set hold options. The default hold duration is set in Home Settings->System Settings. Toggle the "Active" switch to set the room to Inactive. Flair follows "Away Settings" for inactive rooms. Tap the arrow to view Puck and Smart Vent status. Tap the 3-dot menu, then select "Stats" to view helpful room statistics.

### How does Flair determine when to open and close Smart Vents?

Flair will open and close Smart Vents when a room's temperature rises or falls 1°F from the set point. Note: Flair's Backpressure Protect™ will not close more than 33% of all vents in a system.

### How will Flair save energy?

Flair prevents overheating and overcooling by automatically adjusting airflow throughout your home. Flair's schedule can also prioritize areas of your home based on the way you live. Have an office or basement that you use during specific hours? Schedule it as active when in use and inactive the rest of the time.

### Can I connect Flair to my Smart Home devices?

Yes! Flair has integrations with Amazon Alexa and Google Assistant. You can find out more information on how to connect Flair to these devices at [flair.co/alexa](https://flair.co/alexa) and [flair.co/google-assistant](https://flair.co/google-assistant).

### Where can I get more information?

Flair has an extensive collection of articles in its Knowledge Base and an active user Forum. Both are located at [support.flair.co](https://support.flair.co).

### How can I get help?

Flair's California-based support team can be reached at [flair.co/contact](https://flair.co/contact).